

1 Getting to Know Your Phone

Your Phone

Scroll key

- Press this key to scroll through a menu.
- To quick access Browser, Contacts, Edit MMS and My Files.

Left function key

- To activate the function indicated at the left of the prompt bar on the screen.
- To access the main menu in standby mode.

V-P calls

- To make a video call.
- To access the **Call Log** screen in the standby mode.

Send key

- To make or answer a call.
- To access the **Call Log** screen in the standby mode.

 
 
Clear key

To delete a character before the cursor in the editing mode.






Your Phone

Front View and Back View

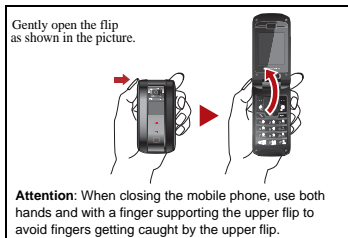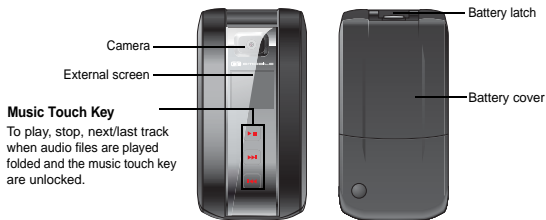

Side View

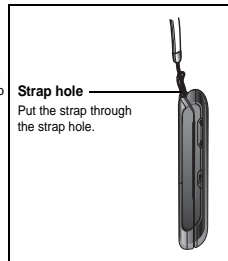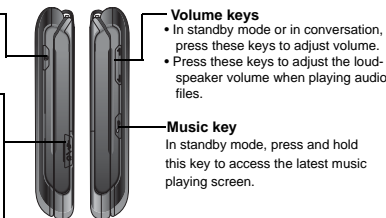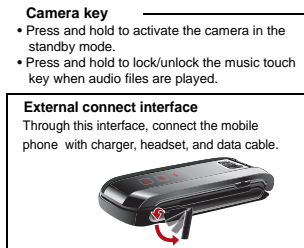   

How to Use the EM chip

Loading the EM chip

- 1 Position the card at the card slot entrance, making sure it is facing the same way as shown in the diagram below, with the notched corner at the bottom right. Then slide in as shown.



- 2 Fit the battery into the battery slot on back of the phone. Press the battery down until it clicks into place.



- 3 Slide the back cover to the phone.



Unloading the EM chip

Only unload the EM chip and the battery after powering off your phone. Otherwise, your phone may be damaged.

To unload the EM chip, do as follows:

- 1 Unload the back cover out of the phone.



Charging the Battery

- 2 Take out the battery.



- 3 Press the EM chip with one finger and slide it out of the slot.



Charging the Battery

Before Charging the Battery

Before charging the battery, read the precautions carefully.


Note

- When you charge the battery for the first time, please charge it for a minimum of 12 hours.
- The battery discharges even while not being used. If you haven't used it for a long time, please recharge it first.
- The charging time depends on the environmental temperature and the age of the battery.
- The battery can be recharged but eventually wears out. If the battery lasts for a shorter time period than usual after being charged normally, replace it with a battery of the same type.
- Do not strike, toss or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, explosion or fire may occur.
- Charge the battery by using the charger supplied with your phone.

Charging with a Cable Charger

Before charging the battery with a cable charger, ensure that the battery has been properly loaded into your phone.

To charge the battery, do as follows:

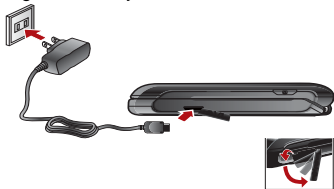

- 1 Insert the plug of the charger into the connector of the phone as shown in the preceding figure. Before inserting the plug, ensure that the arrow on the charger output jack points to the front side of the phone.
- 2 Plug in the connector of the charger to a power socket.
- 3 When the battery is being charged, the charging indicator blinks continuously. When the charging indicator stops blinking, it indicates that the battery is full.

- 4 After being charged, unplug the power adapter from the power socket, unplug the charger from the mobile phone, and then close the protection cover.

Note

- During charging with power is off and the flip closed, a cylinder icon indicating the power level of the battery will appear on the screen and will blink, continuously. When the cylinder is filled and stops blinking, it indicates that the charging is completed.
- When charging the mobile phone with it closed and is powered on, the battery icon is blinking on the upper right corner of the external display. After a while, the external display is automatically off. You can check the charging status by softly touching a side key. When the battery icon stops blinking, the charging is complete.











Home Screen

















Home Screen












Icon	Description
	Indicates signal strength. The more the vertical bars appear, the stronger the signal is.
	No network signal.
	You are using the roaming service.

Icon	Description
	Both HSDPA networks and data services are available.
	Performing data services in HADPS network.
	The phone is currently in a WCDMA network.
	Both WCDMA networks and data services are available.
	Performing data services in WCDMA network.
	The phone is currently in a GSM network.
	Both GSM and GPRS networks are available.
	Performing data services in GPRS network.










Icon	Description
	The Bluetooth function is enabled but the mobile phone cannot be discovered by other devices.
	The Bluetooth function is enabled and the mobile phone can be discovered by other devices.
	Performing Bluetooth transmitting.
	<ul style="list-style-type: none"> Indicates network connection state. Your PC connects to the Internet through your phone.
	Indicates security connection state of the network.
	The phone is in a call.
	Forwarding all incoming voice calls to line 1.
	Call line 2 is enabled currently.
	Forwarding all incoming voice calls to line 2.
	Alarm clock is enabled.

Icon	Description
	SD card is inserted.
	SD card is transferring data to the phone.
	SD card is invalid.
	You have new text messages.
	You have new PUSH messages.
	You have new multimedia messages.
	You have new voice mail.
	The Normal profile is activated.
	The Meeting profile is activated.
	The Silent profile is activated.
	The Activity profile is activated.
	The Car profile is activated.
	The Headset profile is activated.
	The Offline profile is activated.
	The My profile1 profile is activated.
	The My profile2 profile is activated.

Main Menu Icons & Meaning		
		
Entertainment Use Camera & Music Applications	Browser Mobile Internet Use & Settings	Call Log Use Call Log Application
		
Music Use Music & Playlist Applications	Messaging Create/view MMS or SMS...	My Files Open files saved on phone/micro card
		
Organiser & Tools Set Alarm or Calendar entries...	Contacts Save entries to call or send message...	Settings Adjust/customize phone settings

Accessing the Function Screen Through the Shortcut Keys

The description about default short-cut keys in standby screen is as follows:

Main Menu Icons & Meaning		
		
Access the EMnet website.	Access Call Log.	Access Music.
		
Access Browser.	Access Contacts.	Access the Edit MMS screen.
		
Access My Files.	Access Call Log.	Switch between the Normal and Meeting profiles.