



2 Basic Operations

Powering On/Off


Powering On

- 1 Gently open the flip.
- 2 Press and hold  until the mobile phone is powered on.

Powering Off




- 1 Press and hold  until the mobile phone is powered off.


Setting the date and time

- 1 Select **Settings > Phone settings > Date and time**.
- 2 Enter the date and time.(24-hour format)
- 3 Press  to save.

Calls

Making a Voice Call




- 1 Enter a phone number.
 - Enter a phone number through the keypad in the home screen.
 - Press , and choose a number from **Call Log**.
 - Select a number in **Contacts**.
- 2 Press  to dial out.
- 3 Press  to end the call.

Note To delete a wrong number, press  once to delete the digit to the left of the cursor.


Answering a voice call

You can set the answer mode. Select **Settings > Call settings > Answer mode**, and then select **Open flip, Any key** or **Send key**.

1 Answer a call:

- Open flip: You can answer a call when you open the flip.
- Any key: Open the flip, press any key except  and  to answer a call.
- Send key: Open the flip, press  to answer a call.
- If the headset is plugged in, press the headset key to answer a call.

2 End a call:

- Close the flip or press  to end a call.
- If the headset is plugged in, press the headset key to end a call.

You can set the auto answer mode to **select Settings > Call settings > Auto answer**.

- Immediate answer: Your mobile phone answers the call after 5 seconds alerting automatically.
- Message: Your mobile phone sends the predefined SMS to the calling party after 20 seconds alerting.
- Recorded message: The mobile phone plays the 10 seconds record after 20 seconds alerting, and then records the calling party's message.

My number

Your mobile phone automatically displays your number from the EM chip.

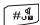
1 Select **Settings > Call settings > My number**.

2 Into the My number screen, press to view the selected number.

Turn meeting profile on

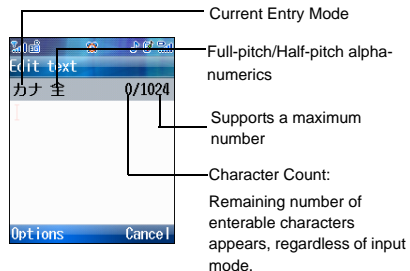
Turn meeting profile on

When meeting profile is active all mobile phone sounds are muted and mobile phone vibrates for incoming calls.

- 1 Press and hold  to the meeting profile from the current profile.


Text Input


MMS Text Input Interface





Switching Input Modes

Text entry modes may be limited in some text entry fields or windows.



- 1 In a text entry window, press .
- 2 Select **Input mode**.


- 3 Select an input mode and press .

Note

- Press  to switch between input methods, including Kanji, Kana, Abc, ABC, abc, and numbers.
- To switch between full pitch and half pitch, select **Options > Full Pitch/Half Pitch**. Except the Kanji input mode, you can press and hold  to switch between full pitch and half pitch.

Symbols/Pictogram




- 1 In a text entry window, press  to display symbols.
- Press  to switch between symbols and pictograms.
 - The selected symbols and pictographs are displayed in the history view.
- 2 Select **symbols** or **pictographs**.

- 3 Press  to exit from the symbols or pictographs window.


Contacts

You can save phone numbers, and Email addresses for up to 1,000 entries in contacts of the phone; EM chip contacts capacity varies with cards. You can also assign eight frequently-used numbers to speed dialing keys.

Creating Contacts





- 1 Select **Contacts** in the main menu.
- 2 Press  to select **Phone** or **EM chip**.
- 3 Select **Options > New**.
- 4 Select a field, press  to edit the field, enter the information as required, and then press  to save it.

Contacts

- After entering basic information, press  to set advanced information when you create a contact in your phone.

- 5 Select **Options** > **Save** to save it.


Editing Contacts

- 1 Select **Contacts** in the main menu.
- 2 Press  to select **Phone** or **EM chip**.
- 3 Search the contact and press .
- 4 Select the field and press  to be edited. Enter new information and press  to save it.
- 5 Select **Options** > **Save** to save the edited contact.

Creating a Contact Through Call Logs

Save phone numbers from **Call Log** to new or existing Contact entries.

- 1 Select **Call Log** in the main menu.

- 2 Press  to select a record.

- 3 Select **Options** > **Save number**.

- Save to phone: Select a phone contact entry, enter other information.
- Save to EM chip: Select a EM chip contact entry, enter other information.
- Append to existing: Search the number and select the number.


- 4 Select **Options** > **Save**.

Note

If the contact entry is already saved, you are notified whether to replace the current number.


Finding a Contact

- 1 Select **Contacts** in the main menu.


- 2 Press  to select **Phone** or **EM chip**.
- 3 Select **Options > Search**.
- 4 Enter the contact name reading or enter the first letter of contact name you are searching for. The contact will be displayed.

Note The search result will include all matched contacts from both the phone and EM chip memories, no matter from which screen (**Phone** or **EM chip**) you start searching.

Making a Call

- 1 Select **Contacts** in the main menu.
- 2 Press  to select **Phone** or **EM chip**.
- 3 Select a contact and select **Options > Call**. Then, you can select **Voice call** or **Video call** to make a call. Alternatively, you can select **Edit before call** to edit the number before making the call.

Creating a Message

- 1 Select **Contacts** in the main menu.
- 2 Press  to select **Phone** or **EM chip**.
- 3 Select a contact and select **Options > Create message**. Then, you can select **MMS** or **SMS** to create a message. If the current contact does not have an Email address, you cannot create a MMS.

Multimedia Message






Send messages via MMS or SMS.


Item	Description
MMS	Through MMS, you can send data such as text, image, and music between two handsets that support the MMS function.
SMS	Through SMS, you can send text messages.

Multimedia Message

Sending a MMS






Icon	Description
	Email address of the MMS recipient
	Email address of the MMS that copies to
	Email address of the MMS that blind copies to
	Subject of the MMS
	Content of the MMS

- 1 Select **Messaging > Write MMS** in the main menu.
- 2 In Edit MMS, enter the addresses of **To, Cc,** and **Bcc.**(→ P17)
- 3 Select **Subject** to enter text as subject, and then press .
- 4 Select **Content** to edit the pages. (→ P17)
- 5 Return to the Edit MMS screen, and select **Options**
 - Send: To send the multimedia message.
 - Save to drafts: Save the MMS to Drafts folder.
 - Add to template: Save the MMS as a template to Templates folder.
 - Send setting: To set parameters relates to sending multimedia messages.
 - Size: View the size the current MMS

◆ Editing Recipient List




Add Email addresses of **To**, **Cc**, and **Bcc**. The bcc address cannot be viewed by others.

- 1 In Edit MMS, select **To**, **Cc**, or **Bcc**, and then press .
- 2 Enter addresses of recipients.
 - Select an entry from the recipients list, and then press  to enter an Email address.
 - Select a position from the recipients list, and then select **Options** > **Contact** to search a contact. Search a contact in this screen (→ P14). Press  to select the contact.
 - Select a position from the recipients list, and then select **Options** > **Group**. Select the group to be added.
- 3 Select **Back** to return to the Edit MMS screen.






Note

- When searching contacts through **Contacts**, you can search all contacts information contains Email address.
- When adding contacts through **Group**, if the contact does not have Email address, the contact cannot be added to the recipient's address.
- The adding addresses of contacts contains **Recipients**, **Cc**, and **Bcc** screens, select **Options**, and then you can select **Set To**, **Set Cc**, **Set Bcc** to change the sending mode of the selected address.

◆ Editing a MMS

- 1 In Edit MMS, select **Content**, and then press .
- 2 Select  to access the text entry field, and then edit text.
- 3 Select  to enter the image-editing field and then you can select images or video files in **My Files**.

Multimedia Message

- 4 Select  to enter the music-editing field and then you can select audio files in **My Files**.
- 5 Access the field indicated by  and press  to select one from different pages if there are more pages.
 - To add a new page, select **Options > Insert page** in Edit MMS.
- 6 Access the field indicated by  and press  to adjust the playing time of the current page.
 - Select **Options > Perview** to preview the MMS.
- 7 Select **Back**.




Note

- If the video file is chosen in the image-editing field, you cannot edit the music-editing field any more.
- Some files may not be attached depending on the file format or size.
- Some copyrighted files may not be sent.

Receiving a MMS


When a MMS is received, the mobile phone displays as follows:



- 1 In this information window, press  to access the **Inbox** of MMS.
- 2 Press  to select the MMS to be viewed, and then press .


Replying a MMS


- 1 In **Inbox** of MMS, press  to select the MMS.
- 2 Select **Options > Reply MMS** or **Reply SMS**.

- Press  to access the Edit MMS screen to edit the MMS.
- Select **Options > Send**.

SMS

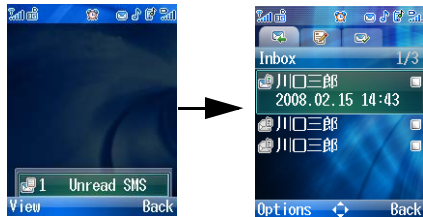
Creating and sending a SMS




- Select **Messaging > Write SMS** in the main menu.
- In the Edit SMS screen, enter a message.
- After editing the message, press  to access the Edit numbers screen.
 - Enter a phone number.
 - Select **Options > Contacts** to access the Search screen, and then select one or multiple phone numbers. (→ P14)
 - Select **Options > Group** to select a group.

- In the Edit SMS screen, press  or select **Options > Send**.
 - Select **Options > Save** to save the message.

Receiving a SMS


When a SMS is received, the mobile phone displays as follows:





- In this information window, press  to access the **Inbox** of SMS
- Press  to select a SMS to be viewed, and then press .

Browser

Note

When the Inbox is full and a new SMS is received, the  starts blinking and a prompt dialog box is displayed. You need to delete some messages to receive the new message.




Replying a SMS

- 1 In **Inbox** in SMS, press  to select the SMS.
- 2 Select **Options > Reply**.
- 3 Press  to access the Edit SMS screen to edit the SMS.
- 4 Select **Options > Send**.




Browser

Browsing EMnet

- 1 Select **Browser** in the main menu.





- 2 Press  to select **EMnet** to access pre-defined webpages.
- 3 Press  to select a highlighted connection, and then press  to access.
- 4 When browsing web pages, you can select **Options** to perform operations.

Entering Web Address



- 1 Select **Browser** in main menu.
- 2 Press  to select **Enter URL**, and then press .
- 3 Enter the web address.
- 4 Press  to access the web address.

My Files

Viewing files

- 1 Select **My Files** in the main menu.
- 2 Press  to select the saving location of the folder, and then press  to access.
- 3 Press  to select a file, and then press  to view.

English Display

- 1 Select **設定 > 一般設定 > Phone language**.
- 2 Press  to select **English**.
- 3 Press  to save.

Specifications

H11HW

Item	Specification
Dimensions (W × H × D)	Approx.(Closed). 49.5 mm × 97.8 mm × 17.5 mm
Weight	Approx. 105 g (including the battery)
Continuous standby time	Approx. 380 hours
Continuous talk time	Approx. 190 minutes
Charge time	Approx. 2.5 hours

Note The standby time and talk time may vary by environment.

Battery

Item	Specification
Voltage	3.7 V
Battery	Li-ion

Item	Specification
Capacity	850 mAh
Dimensions (W × H × D)	Approx. 44.5 mm × 37.8 mm × 5.7 mm

AC Charger

Item	Specification
Power Source	AC 100 V-240 V
Input Current	0.2A MAX
Output Voltage/ Current	5.0 V / 650 mA
Dimensions (W × H × D)	Approx. 59.6 mm × 61 mm × 28 mm
Cord Length	Approx. 180 cm